

PARAMOTORE SPECIFICO - SPECIFIC ENGINE GUARD - PARE-CARTER SPECIFIQUE SPECIFISCHER  
STURZBÜGEL - DEFENSA DE MOTOR ESPECIFICA - PARAMOTOR ESPECIFICO

# HONDA CB600F 2007 HORNET

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCTIONS DE MONTAGE  
BAUANLEITUNG - INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM

TN453-KN453

1

PARAMOTORE  
ENGINE GUARD  
PARE-CARTER  
DEFENSA DE MOTOR  
PARAMOTOR

Q.TY n.2<sup>(4x-2x)</sup>

2



NIPPLES

Q.TY n.1

3



VITE TBEIFF M6x16  
SCREW  
VIS  
SCHRAUBE  
TORNILLO  
PARAFUSO

Q.TY n.2

4



FONDELLA 618F0NP  
WASHER  
RONDELLE  
SCHEIBE  
ARANDIELLA  
ARANDIELA

Q.TY n.2

5



VITE TE M12x195mm  
Screw  
SCREW  
VIS  
SCHRAUBE  
TORNILLO  
PARAFUSO




Q.TY n.1

6



DESTANZALEG18x25mm  
Fodo  
0105mmV667  
Abstand  
BREMSE  
DESTANZSTÜCK  
DESTANZADOR  
ESPACADOR

Q.TY n.1

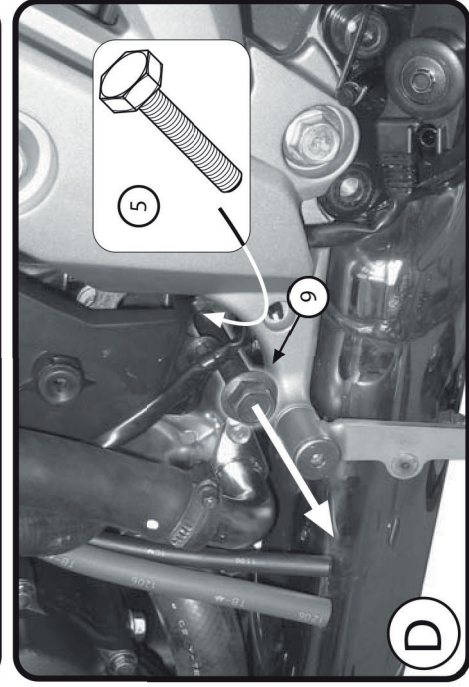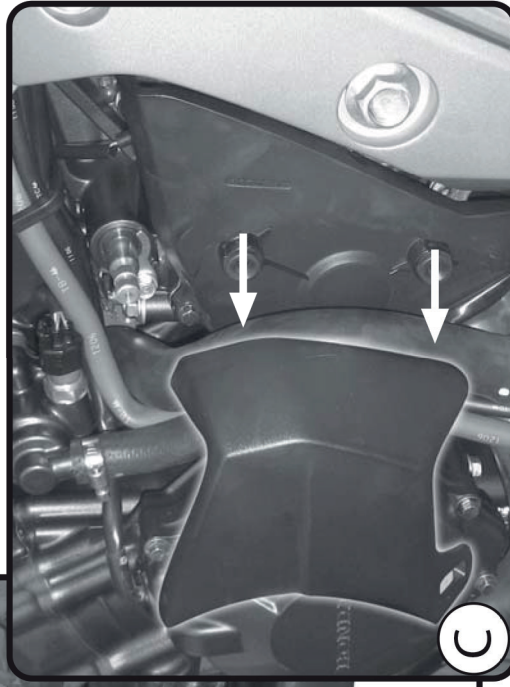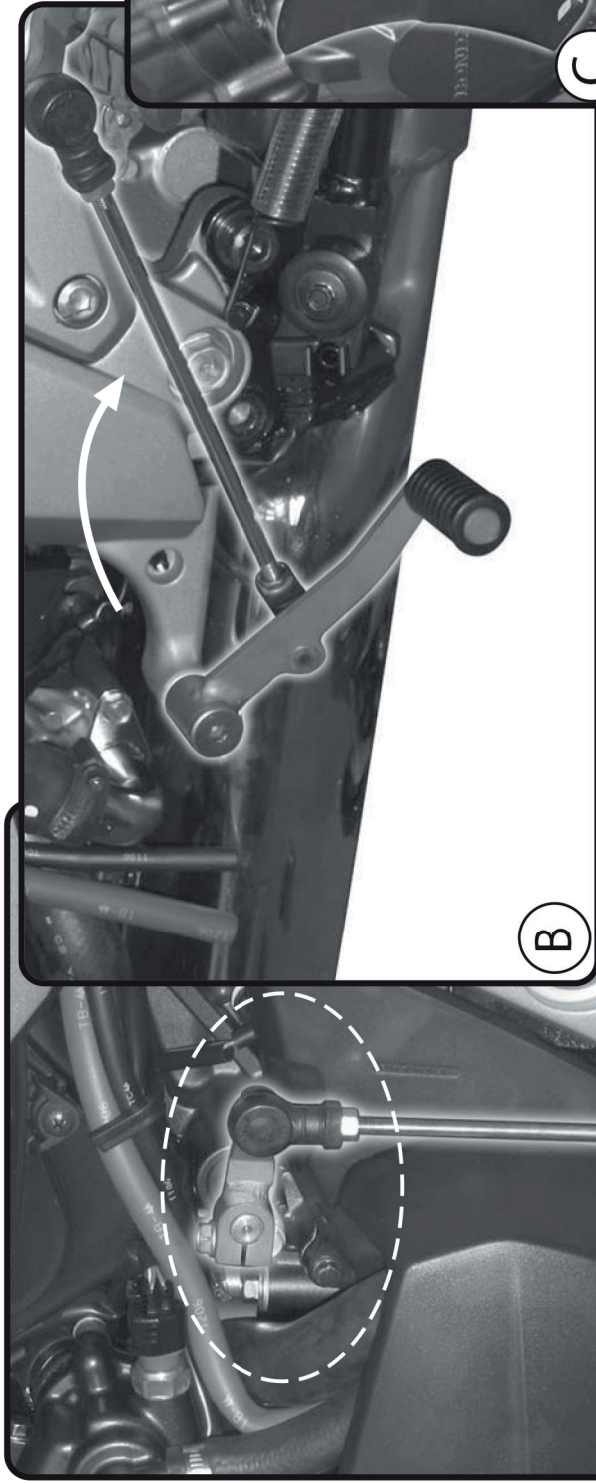

SI RACCOMANDA DI FARE ESEGUIRE IL MONTAGGIO  
AD UN MECCANICO QUALIFICATO

WE RECOMMEND THAT THE MOUNTING IS CARRIED  
OUT BY A QUALIFIED MOTORCYCLE MECHANIC

IL EST RECOMMANDE DE FAIRE EXECUTER LE  
MONTAGE PAR UN MECANICIEN QUALIFIE

WIR EMPFEHLEN, DASS DIE MONTAGE VON EINEM  
FACHMECHANIKER DURCHGEFÜHRT WIRD

LES RECOMENDAMOS QUE EL MONTAJE DE LA  
DEFENSA SE REALICE POR UN MECÁNICO  
CALIFICADO

RECOMENDAMOS QUE A MONTAGEM É REALIZADO  
POR UM MECÂNICO DE MOTOS QUALIFICADO


PARAMOTORE SPECIFICO - SPECIFIC ENGINE GUARD - PARE-CARTER SPECIFIQUE SPECIFISCHER  
STURZBÜGEL - DEFENSA DE MOTOR ESPECIFICA - PARAMOTOR ESPECÍFICO

## HONDA CB600F 2007


HORNET

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCTIONS DE MONTAGE  
BAUANLEITUNG - INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM



TN453-KN453

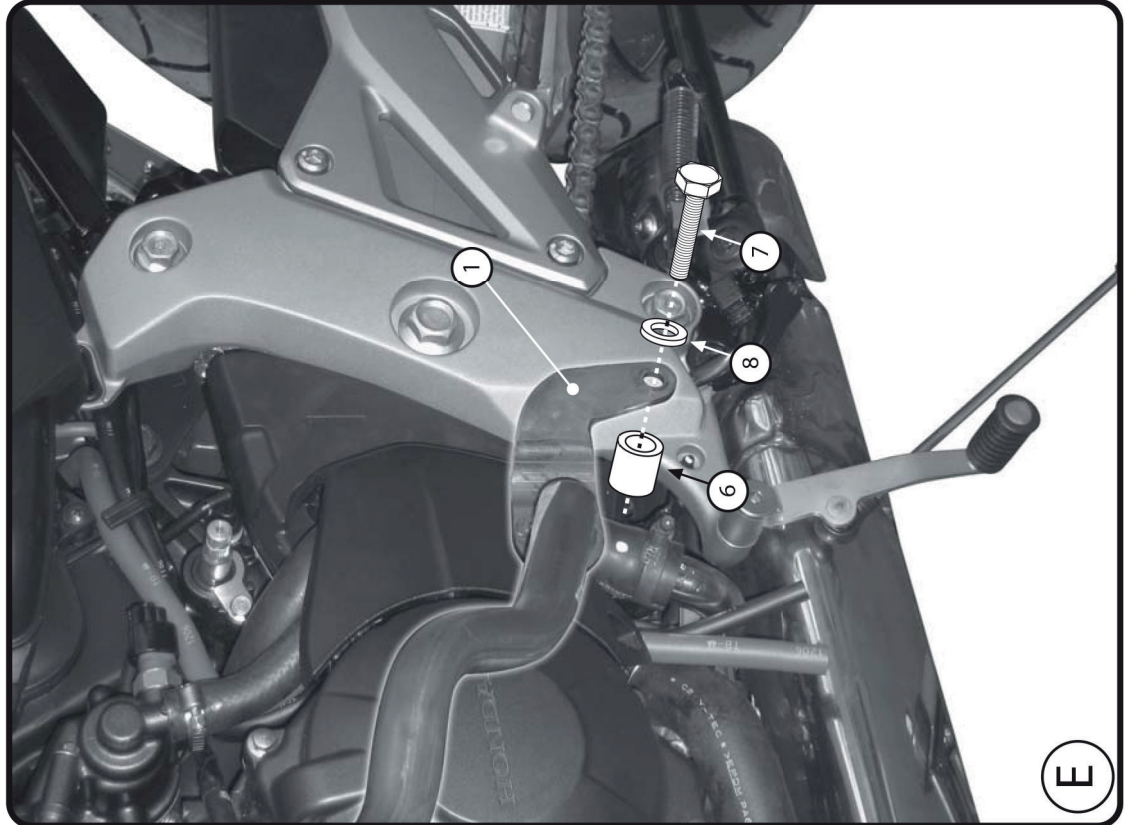



E

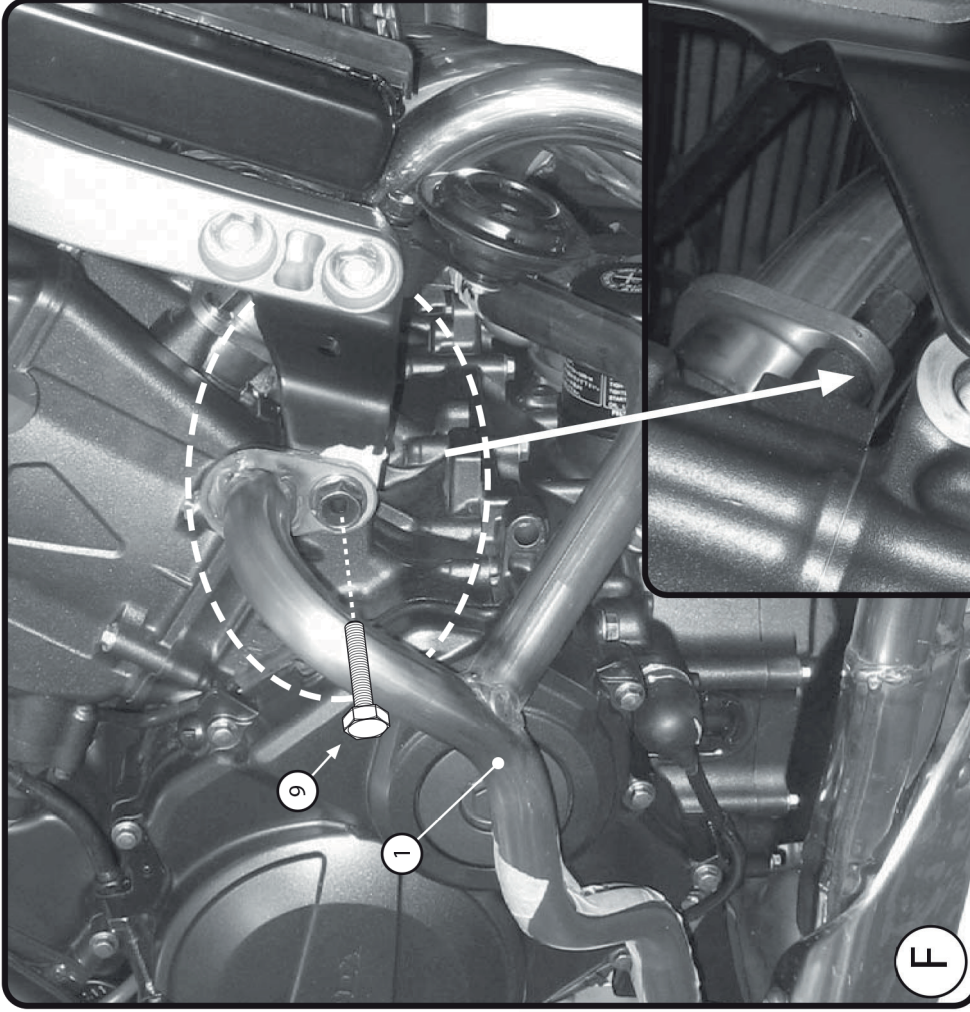

F

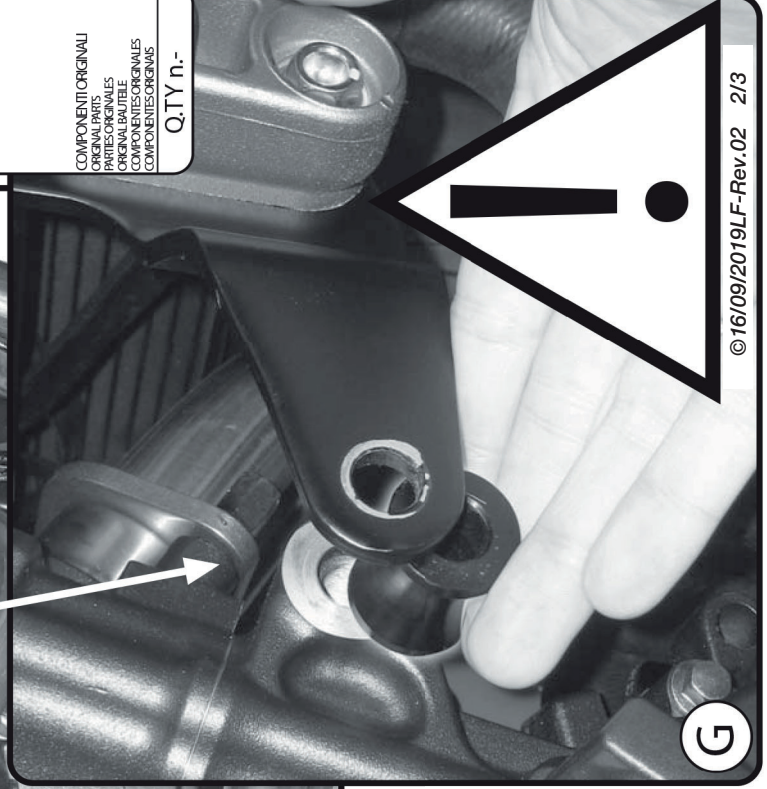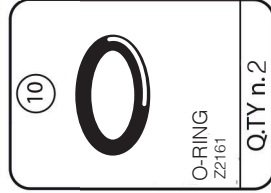

G

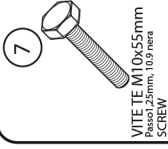

PARAMOTORE SPECIFICO - SPECIFIC ENGINE GUARD - PARE-CARTER SPECIFIQUE SPECIFISCHER  
STURZBÜGEL - DEFENSA DE MOTOR ESPECIFICA - PARAMOTOR ESPECIFICO

# HONDA CB600F 2007

## HORNET

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCTIONS DE MONTAGE  
BAUANLEITUNG - INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM

TN453-KN453

